 


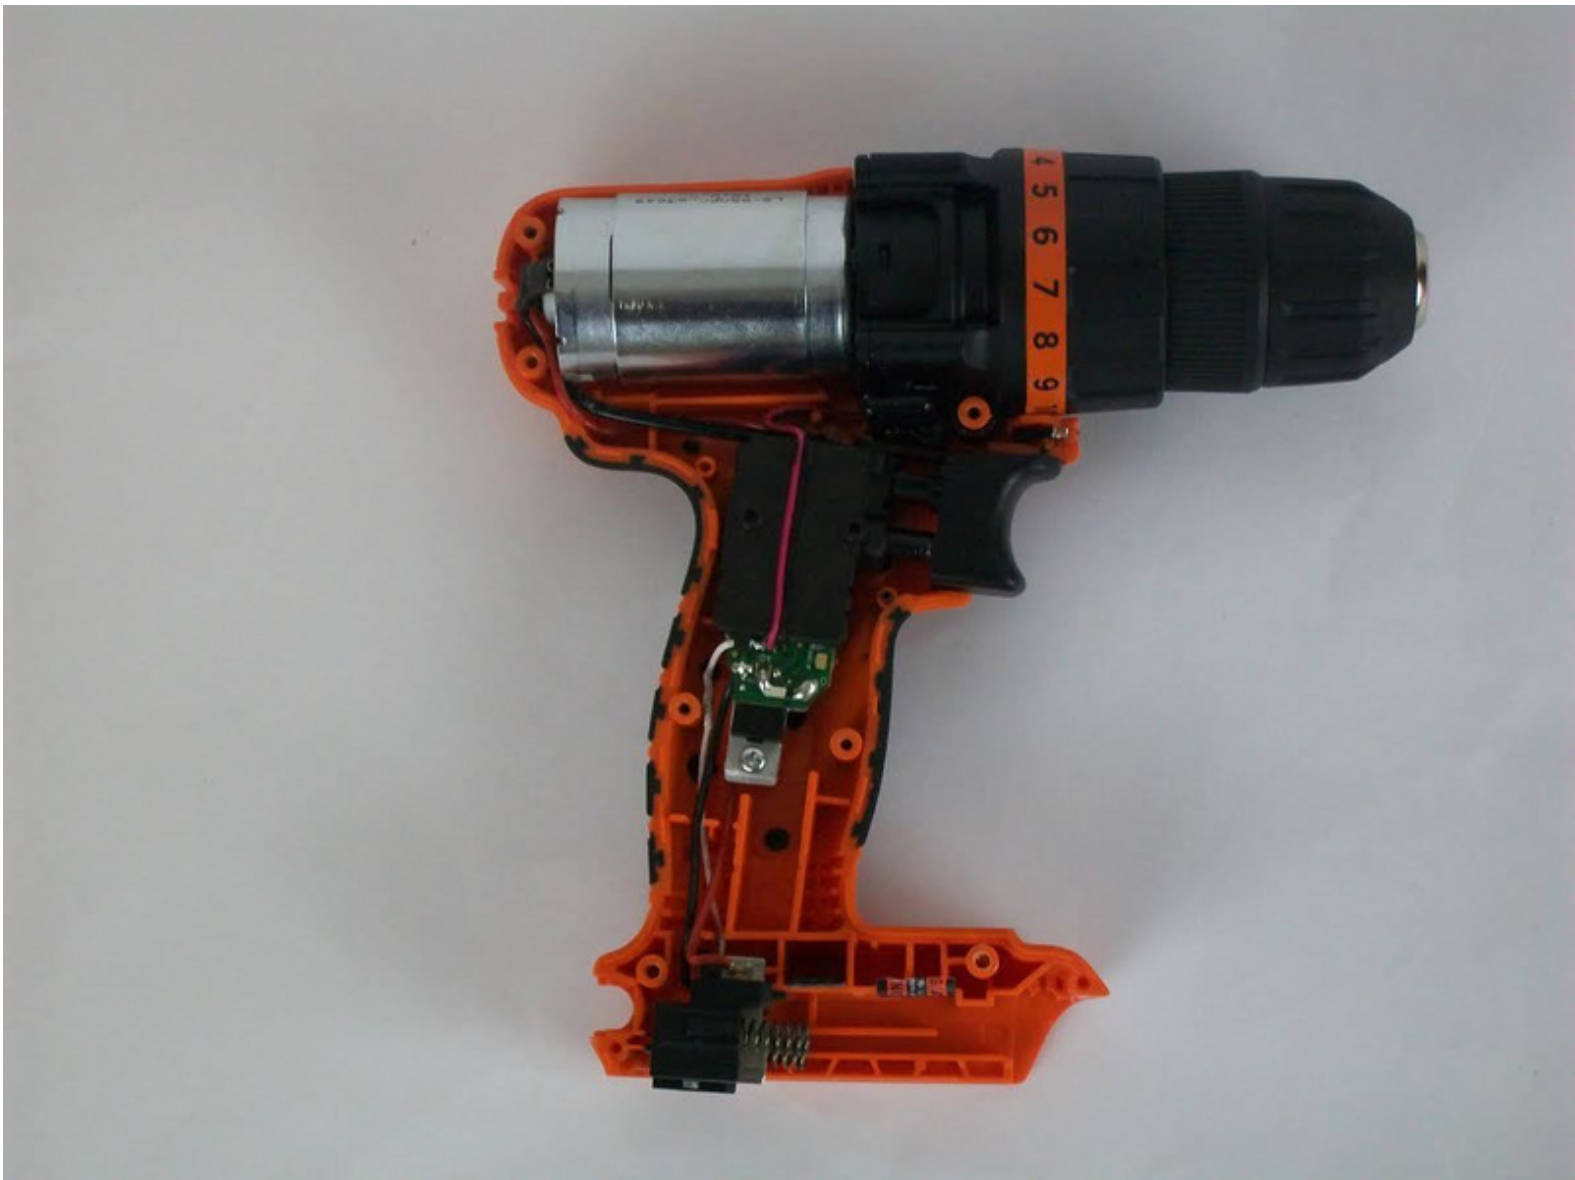

Black and Decker LDX 120C Safety switch and trigger chip Replacement

This guide will demonstrate a step by step process on how to fix the trigger chip as well as the safety switch.

Written By: jeffrey zakka



INTRODUCTION

If the trigger or the safety switch on the drill is stuck or jammed. This guide will illustrate on how to solve this problem.



TOOLS:

 
- [iFixit Pro Tech Toolkit](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Outer Case



- For this guide we will need to use a 1.0 mm phillips #1 screw.
- There are a total of thirteen screws that need to be removed in order to open the drill and access the interior components.

Step 2

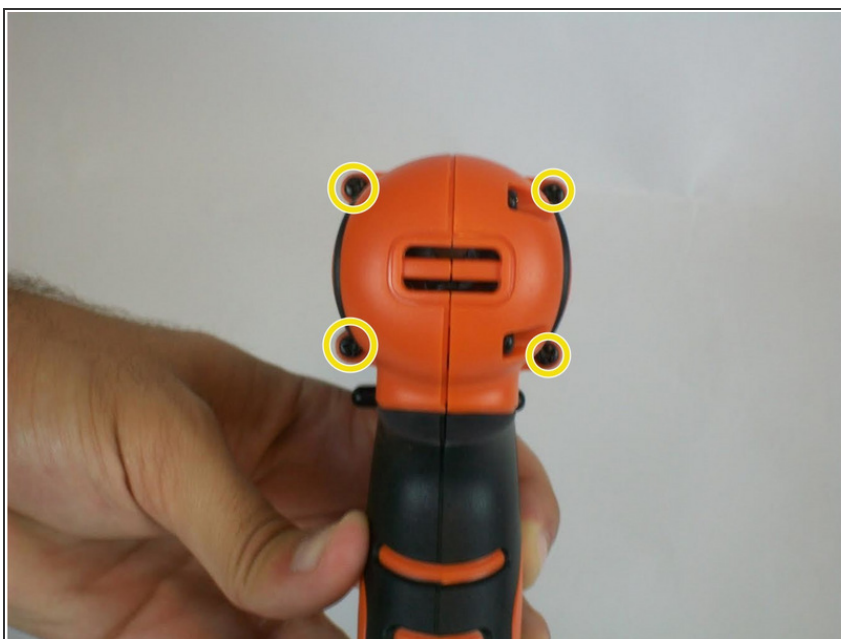

- Remove the four screws on the back top side of the drill.

Step 3



- Remove the four screws that connect the chuck to the drill.

Step 4



 
- Remove the five screws on the front side of the drill.

Step 5




- Gently grab both sides of the drill casing, and separate both sides from each other.

Step 6

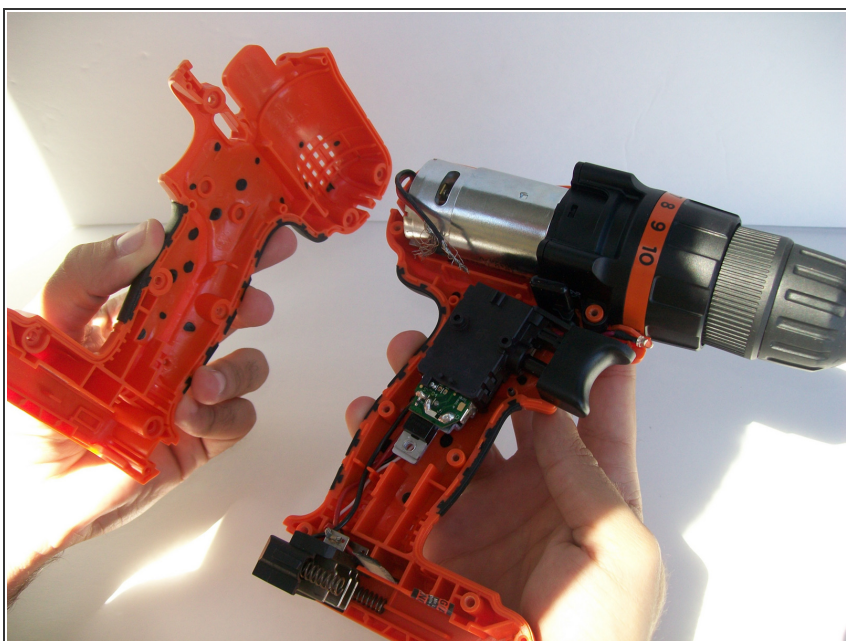

- At this point you should be able to separate both as illustrated.

 Step 7

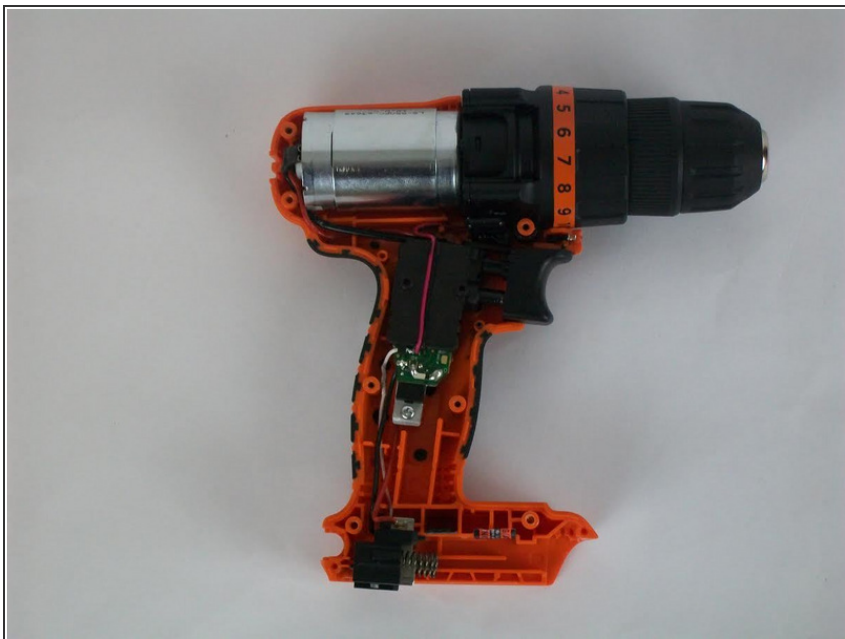

- Now all the components of the drill are visible and can be accessed.

Step 8 — Safety switch and trigger chip



 
- After following the prerequisite guide the interior components of the drill can now be accessed.

Step 9




- Separate the top part from the rest of the drill.

Step 10

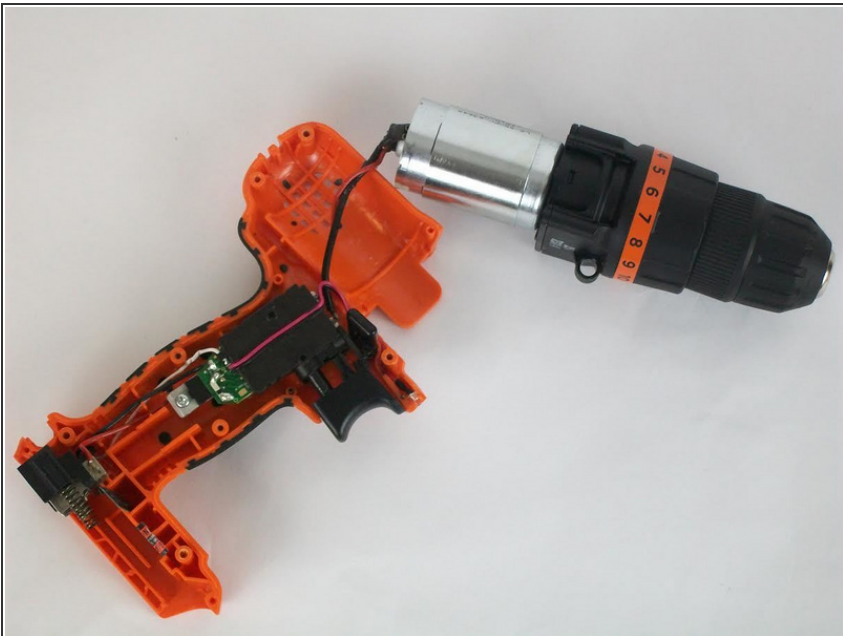


- ⓘ Do this with care so that no wire connection is damaged.

 Step 11

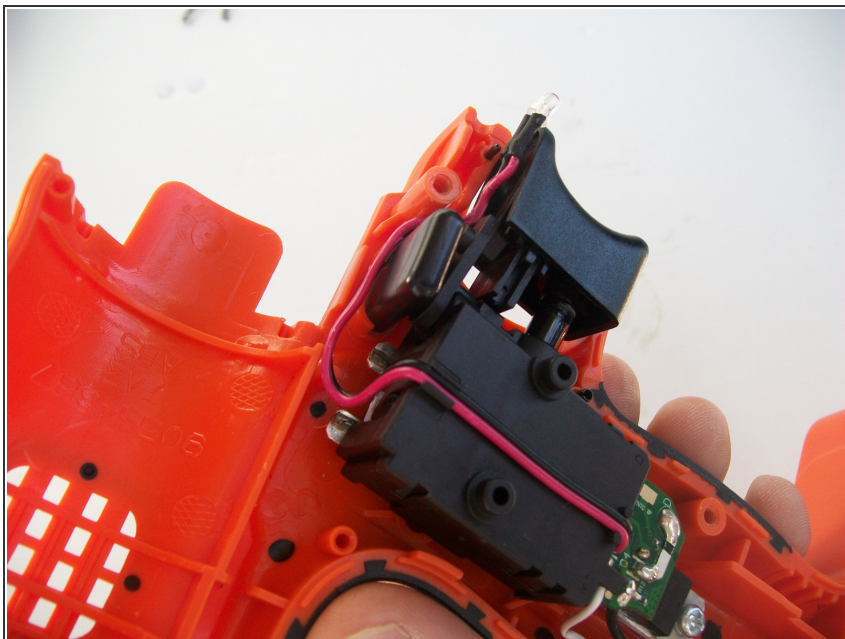


- Remove the other part from the rest of the drill.

 Step 12

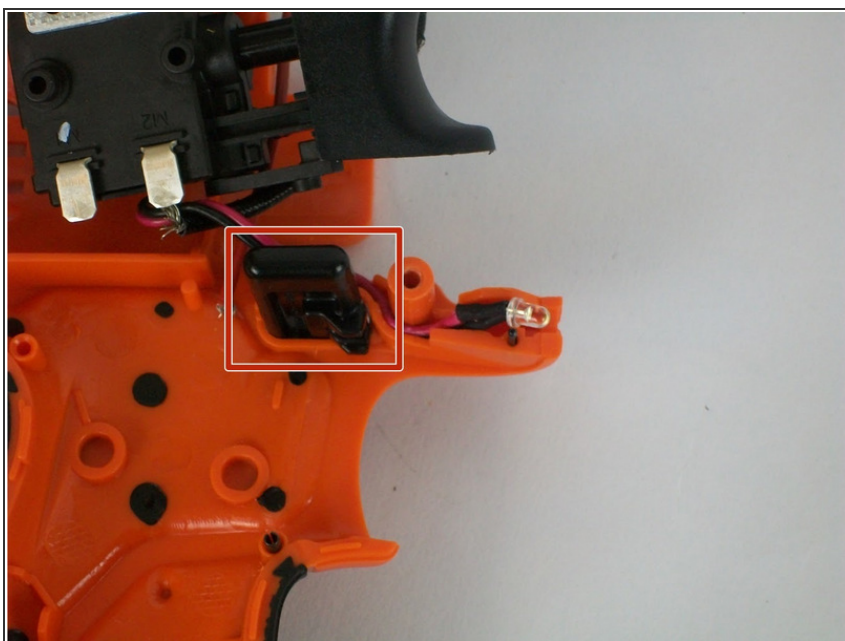


- Check if the safety switch is well placed in its path, or if it is getting jammed by something.
- If it is broken simply replace it with a new one.

 Step 13

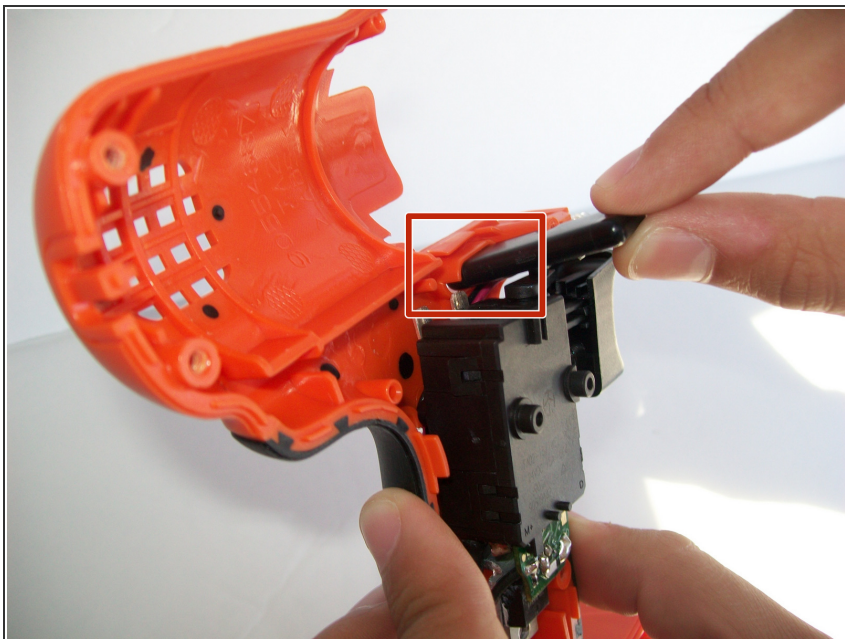


- Slowly pull the safety switch from the its place.

 Step 14

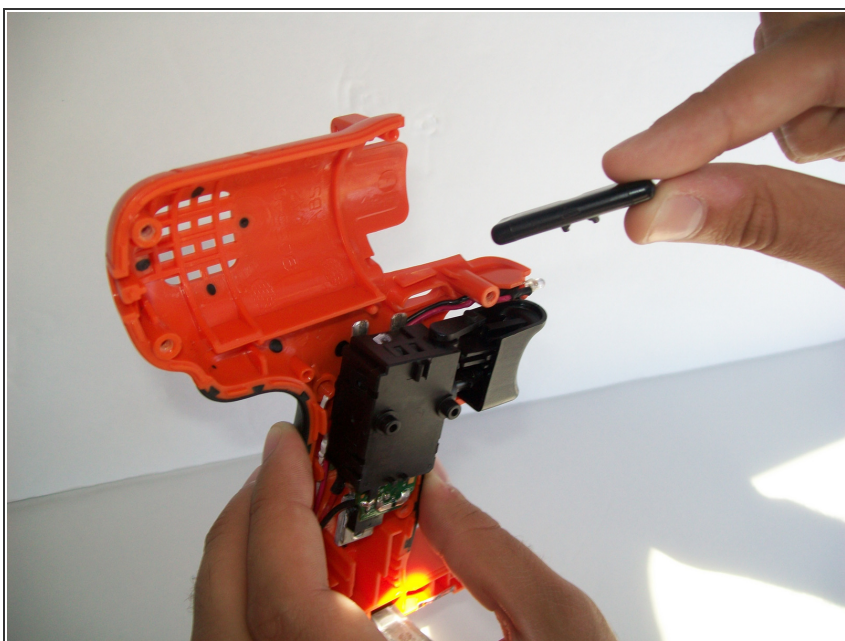


- After removing the old safety switch a new one can now be replaced.

 Step 15

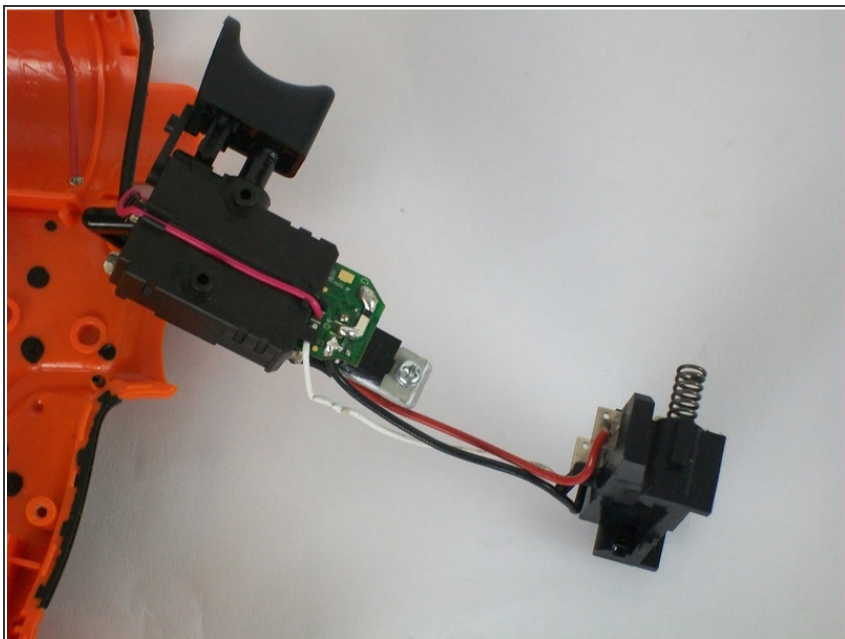


- Now the connections can clearly be seen.

 Step 16

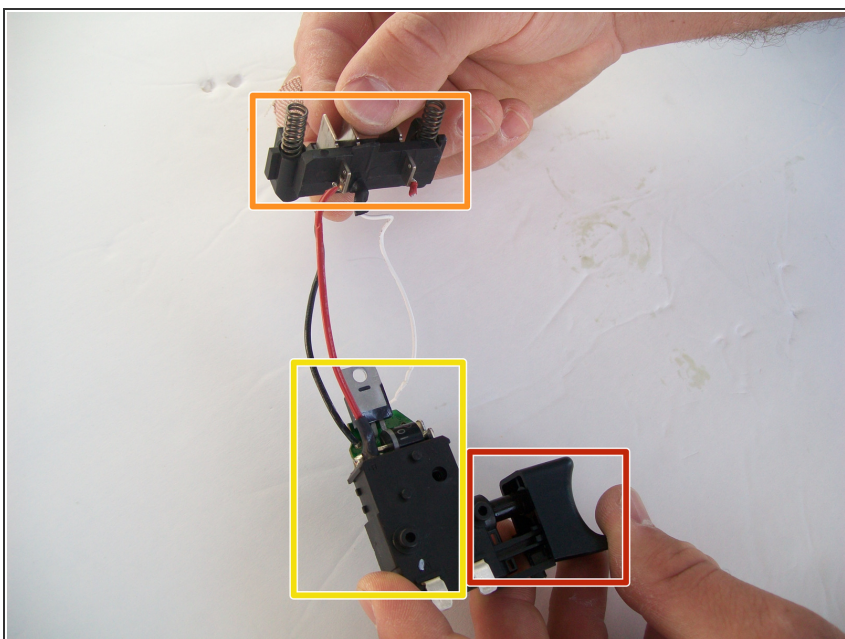


- The trigger is indicated by the red box.
- The battery connector is indicated by the orange box.
- The chip is indicated by the yellow box.

 Step 17

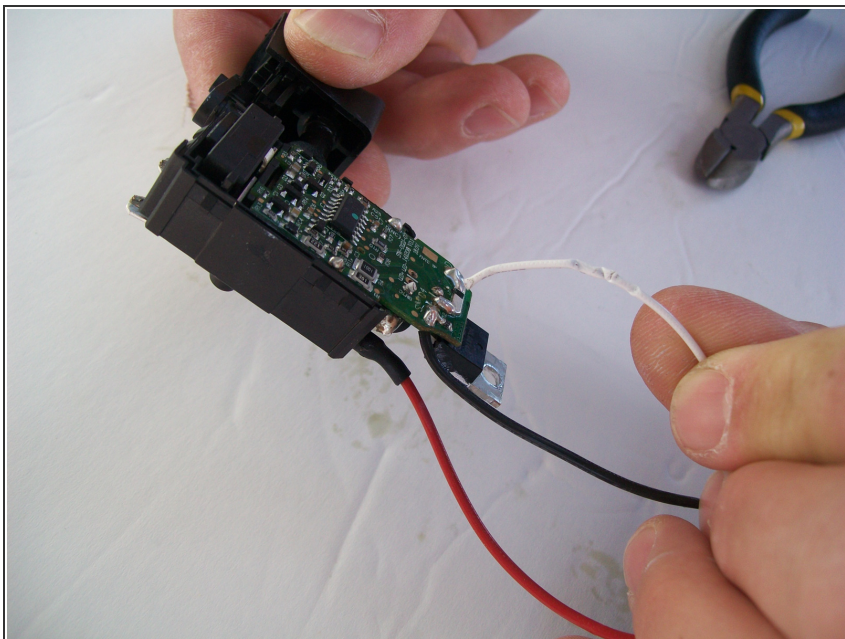


- Check if all the connections are not intact.

 Step 18

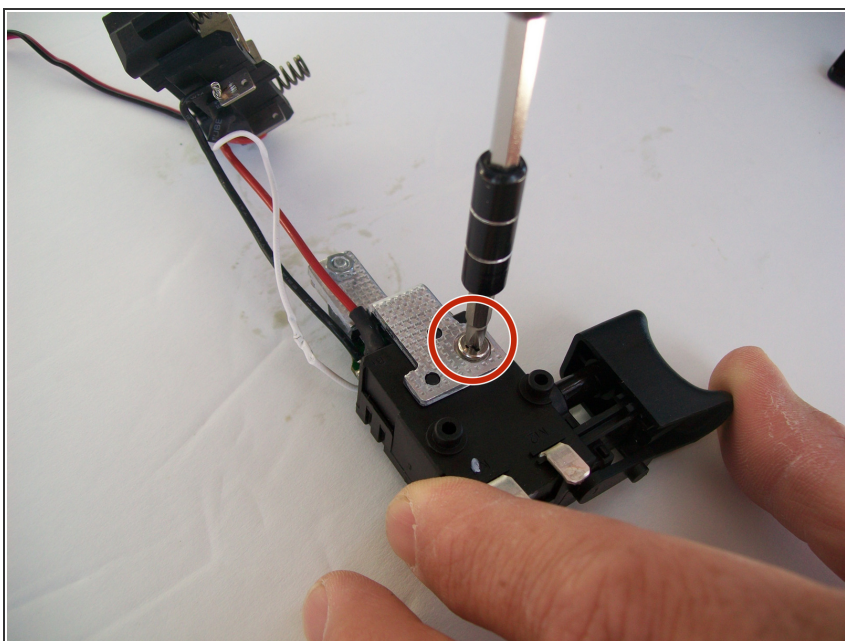


- You will need to check on the connections to the chip.
- Undo the screw as indicated.

 Step 19

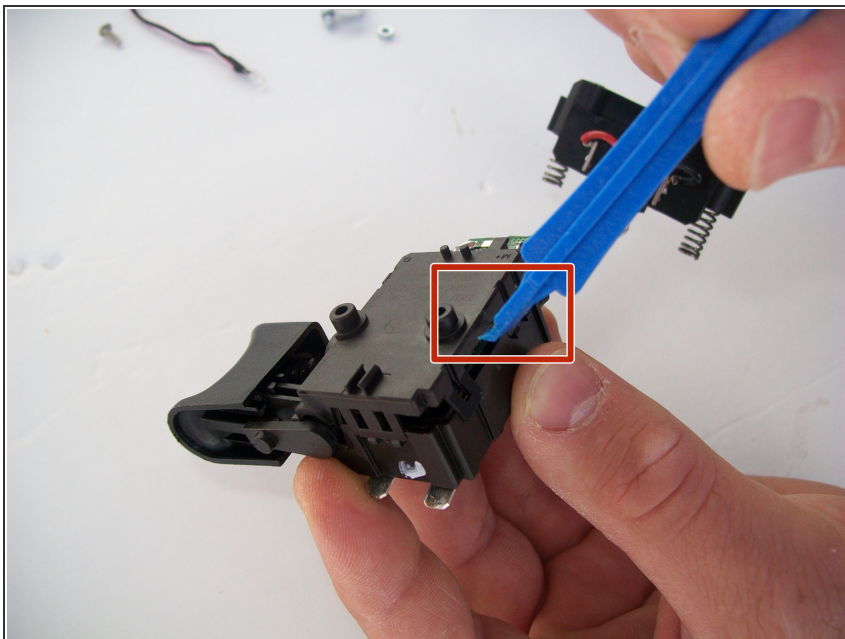


- Then use a plastic opening tool to open the box compartment.

 Step 20

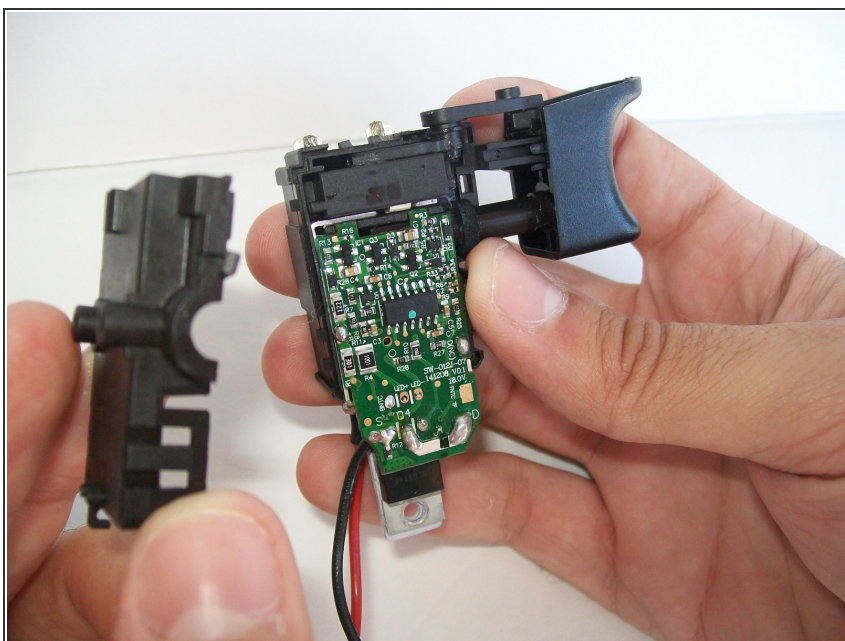


- The connections to the chip are now visible and can be inspected.
- If the connections are loose reconnect them.
- If not then the chip is damaged and will need to be replaced.

 Step 21

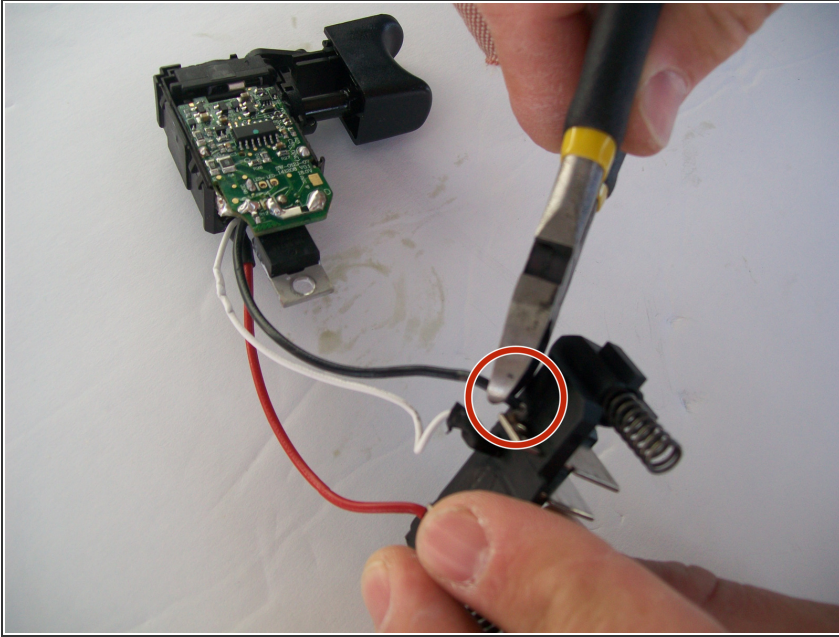


- Start by removing all the wires connected between the chip and the battery connector.
- To prevent damage to the component, consider desoldering the wires instead of cutting them. Learn more about desoldering [here](#).

 Step 22

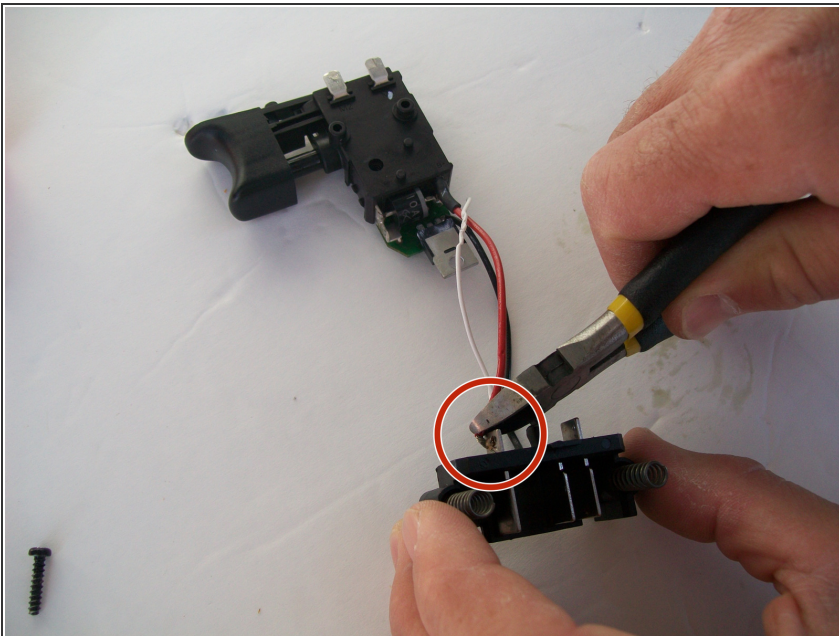

- There is a total of 3 connections that connects the battery connector to the chip.

 Step 23

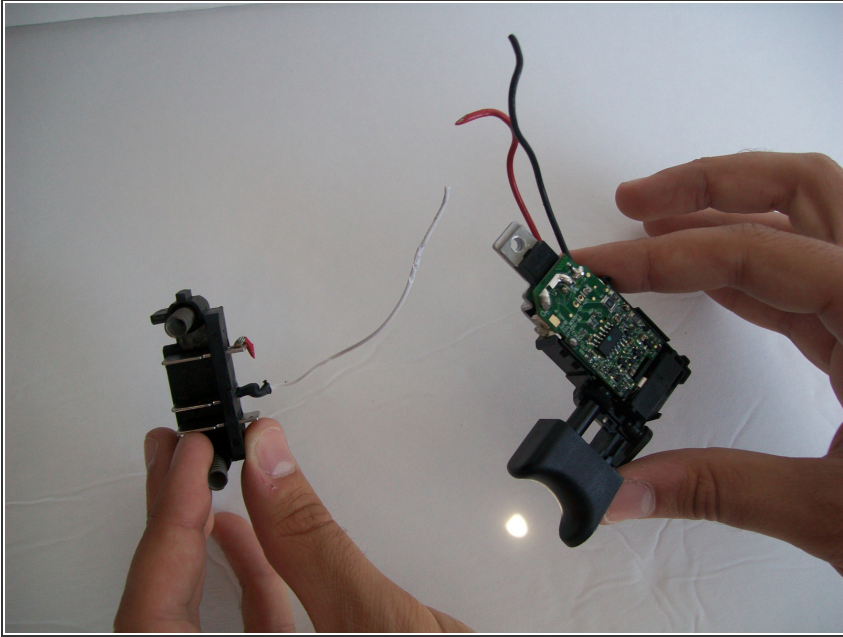

- After all the wires have been removed, now the two parts can be separated.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-17 10:10:27 PM.